
USER'S MANUAL

Group I+II+III: 9-36kg







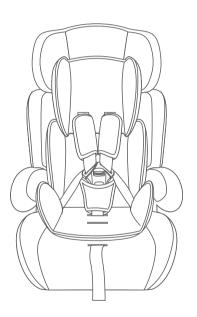



Contents

Contents1
Important2
Know your car seat3-4
1. Suitability5
2. Use in the vehicle6
3. Securing your baby7
3.1 Securing your baby using the baby insert7
3.2 How to adjust the belts, headrest and seat positions8
3.3 Securing your baby using the harness9
3.4 Tightening the harness9
4.Installation in the vehicle10
4.1 Installation of Group I for the children weight between 9-18kg10
4.2 Installation of Group II/III and it is for the children whose weight between 15-36kg11
5.Care instructions12
5.1 Removing the 5-point harness system and cover12
5.2 Refitting the 5-point harness system and cover12
5.3 Cleaning

Important

Thank you for your purchasing our baby car seat to protect your babies. This child restraint has been approved in accordance with the regulation ECR-R44/04, and manufactured under strict quality control. Please follow all regulation labeled on this child restraint and in the written instructions can result in death or serious injury in a crash.



Read carefully before installing your car seat

• Please read carefully before installation, serious injure will be occur if install

incorrectly. Manufacturer won't take responsibility for any risks in this case.

Don't make any changes, additions, or changes the way of the restraint harness to the child car seat, otherwise could seriously affect the security and functionality.

Always keep the restraint secured in the vehicle even when it is unoccupied.
 Child can't be placed in child car seat alone or should not be unattended.

Never place the child car seat on the vehicle seat with air bag.

Never place the child car seat on the vehicle seat with air bag.
 Never place the child car seat on the vehicle seat with two-point car safety

belt.

Please ensure all people in car use safety belt, goods in car must be fixed,

otherwise, people and goods may injury child when in the emergency brake situation.

* Child car seat can't be reused after damaged in an accident.

 Keep the child car seat out of sun directly, otherwise high-temperature can hurt child.

 Buckle can't be in semi-locked status. Always confirm the restraint is locked before using. In case of emergency child can be taken out quickly.

before using. In case of emergency child can be taken out quickly.

Keep the child car seat away from any erosive articles.

 Never use the child car seat without cover. Never use any cover which not recommended by manufacture to replace old cover, because the cover

constitutes an integral part of restraint performance.


Car seat surface will be signs of wear after using child car seat on that made from sensibility material, for example, velour, leather and so on. Please use


think blanket or towel to prevent from this matter.

Child car seat can be only used in car to protect your child, it can't be used

Child car seat can be only used in car to protect your child, it can't be used at home as seat or toy.
Manufacturer guarantees the product's quality except second-hand products.

Know your car seat

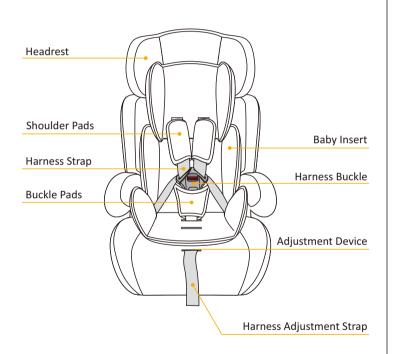

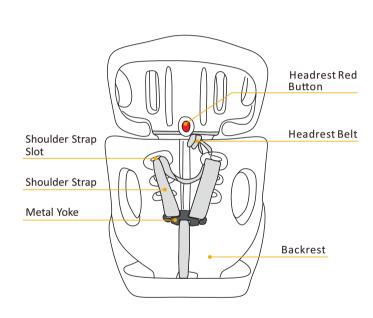

Use in the vehicle

1. Certification



... as a child safety seat installed in a vehicle

Child Safety Seat	Tested and certified according to ECE* R 44/04	
	Group	Body Weight
YB702A	+ +	9- 36kg

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/04).

The seal of approval E (in a circle) and the approval number are located on the approval label (sticker on the child safety seat).

This approval will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat.

2. Use in the vehicle

WARNING



DO NOT use with 2-point belt.
Please install with the 3-point belt.



Please observe the regulations applicable to your particular country. The safety belt must be approved to ECE R 16 or a comparable standard. Do not use with 2-point belt.

Can be used if the vehicle seat is equipped with a 3-point belt.

You can use your child car seat as follows:







In the direction of travel	Yes
• Against the direction of travel	No
• With 2-point belt	⊘ No
The use of a 2-point belt substantially increases the risl to your child in the event of an accident.	of injury
• With 3-point belt	▲ Yes
The safety belt must be approved to ECE R 16 or a com standard (see test label on belt with an "E" or "e" in a c	
with the ISOFIX and Top Tether anchoring systems	⊘ No
If there is a front airbag: Slide the passenger seat a long and refer to any instructions in vehicle owner's manual	-
On front passenger seat	▲ Yes
Do not use on passenger seats with a front airbag! The passenger seat may be used with or without ISOFIX, w same notes as currently given for the ISOFIX (slide the and refer to vehicle instructions).	ith the
On outer rear seat	Yes
On centre rear seat	⚠ Yes

(Please observe the regulations applicable to your particular country).

Securing your baby

Securing your baby

3. Securing your baby

3.1 Securing your baby using the baby insert




For the protection of your baby

CAUTION

Please use the baby insert attached to this car seat when your baby 's weight is less than 15kg.

The baby insert is used to provide extra comfort for very small babies, and it gives your baby the necessary support while he or she is still small.



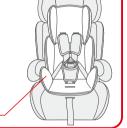

- Always secure your baby in the car seat using the harness.
- Never leave your baby unattended in the car seat when placing it on elevated surfaces (e.g. a table, nappy changing unit, etc.).
- Never allow the strap end to become caught in moving parts (e.g. automatic doors, escalators, etc.).
- Caution! The plastic parts of the car seat heat up in the sun, so that your baby
 may get burnt. Protect your baby and the car seat against intensive solar
 radiation (e.g. by putting a light cloth over the seat).
- Take your baby out of the car seat as often as possible to relieve its spine. We recommend frequent breaks during long journeys. Even outside of the car, please avoid leaving your baby in the car seat for too long.

3.2 How to adjust the belts, headrest and seat positions

IMPORTANT The correct belt height of the shoulder belts is attained when the belt disappears into the shell slightly above the shoulder of the child.

Make sure that the shoulder belts fit properly over the shoulders of the child.

3.2-1 Adjusting the belts


 Loosen the harness straps by pressing the release button and pulling the harness straps as far as you can.

Note! Do not pull the shoulder pads.



3.2-2 Eight heights of the headrest

 The headrest can be set at five different heights in group I mode. There are three additional positions in Group II & III mode once the shoulder pads and harness straps has been removed.




 Press and pull the handle behind headrest.
 It is important to make sure the headrest fit properly to head.



Securing your baby

3.3 Securing your baby using the harness

 Loosen the harness straps and open the harness buckle, then place the harness straps to the sides of the car seat.





Put the baby into the car seat.

 The correct belt height of the shoulder pads is attained when the strap disappears into the shell slightly above the shoulder of the child.

Make sure that the harness straps fit properly over the shoulders of the child.



- Slide buckle tongues together and insert them in the buckle with an audible sound "click".
- Pull the straps tight by the harness adjustment strap, and make sure the tightness is comfortable to your kid.





CAUTION

Do not twist or interchange the harness straps.

3.4 Tightening the harness

CAUTION

Pull the straps end straight towards you, not upwards or downwards.

Please pay attention to the strap end. Whilst traveling (especially outside the car) it should always be attached to the cover.

Installation in the vehicle

4.1 Installation of Group I and it is for the children whose weight between 9-18kg.




Group I : Forward facing installation(suitable for the child weighing from 9kg to 18kg)

 Place seat on the vehicle seat without any incline, ensuring its backrest be placed firmly against the vehicle seat.




NOTE:

- Before place the restraint, please ensure the vehicle seat back is end long.
- The harness strap could not be twisted.
- The restraint backrest must be placed tight against the vehicle seat, without gap.



 Pull the 3 point belt (lap and shoulder belt) through the belt guides at the backrest & bottom part of the car seat.



 Enter into the buckle tongue until you hear a clear "click". Then tighten the vehicle belt by pulling back the slack parts. Make sure the seat is stable and secure.





Please do not leave your child unattended in the child safety seat in the vehicle.

Installation in the vehicle


Care instructions

4.2 Installation of Group II/III and it is for the children whose weight between 15-36kg.

 Before the installation, please take away the Harness system of baby car seat.

Note: The Baby insert, Harness strap, Harness buckle. Buckle pads& Shoulder pads should be stored away safely for future use (see 5.1 Removing the 5-point harness system and cover).

• Pull the 3 point belt (lap and shoulder belt) through belt guide slot at the car seat base and back part of the car seat, please confirm seat belt lays flat and is not twisted. Choose proper height of shoulder belt slot at the back part of the car seat to fit child's body. Put the two buckle clips together then fasten buckle and harness clips until you hear a notice able "click".






4.3 Installation of Group II/III without backrest and it is for the children whose weight between 15-36kg.

- Hold the backrest, then push it over toward the level.
- Press the base with your hand, and pull the backrest out from base with your other hand.
- Place the child car seat on the passenger seat ensuring it is firmly against the vehicle seat.
- Sit your child on the car seat with their back against the back rest. Place the seat belt around your child positioning th lap section of the safety belt under both armrests, then harness clips until

you hear a notice able "click".





5.1 Removing the 5-point harness system and cover


 Loose the harness strap and pull strap out off the strap voke as shown in right picture.






• Pull two harness straps out off cover slot






• After above steps, draw whole strap out from the bottom of seat. Rotate buckle clip to the shown position, then take it out from seat base.





• Remove the 5-point harness system then remove the headrest cover and the shell cover.



5.2 Refitting the 5-point harness system and cover

To refit the 5-point harness system, please refer to the steps how to take off it then do as the reverse way.

Care instructions

Care instructions

5.3 Cleaning

Please be sure to use only original seat covers, as the seat cover is important to the proper functioning of the system. Replacement seat covers are available from your retailer and or at branches.



The child seat must not be used without the seat cover.

- The **cover** can be removed and washed with a mild detergent using the washing machine's cycle for delicate items (30°C). Please observe the instructions on the washing label of the cover. The colours of the cover may fade if washed at more than 30°C. Do not spin, and never tumble dry in an electric clothes dryer (the fabric may separate from the padding).
- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).
- The harness can be removed and washed in lukewarm soapy water.

 Caution! Never remove the buckle tongues from the straps.

5.4 Checklist

For safety's sake read through this checklist before you set off.

Check that the harness belt system fits properly and tightly around your child and that the shoulder belts are at the correct height.

Check regularly that the belt in the baby car seat is not damaged. If it is damaged do not use your product in any circumstances and contact your supplier or importer (see address list in the service card).

Check that you have secured your baby car seat with the seat belt.

If you have any questions, please contact your supplier.

- Make sure that you have the following details to hand:
- Serial number underneath on the service card.
- Mark and type of vehicle and seat on which the baby car seat used.

 Age and weight of your child.

5.5 Warranty

The warranty period starts from the date of purchase and is valid for a period of 12 months. The warranty is only applicable to the original owner and is not transferable. The warranty is only applicable to products that have not been

adapted by the user.

In the case of any defects, the owner is required to return the product to the retailer of the retailer can not solve the problem, he must return the product.

retailer. If the retailer can not solve the problem, he must return the product, complete with a clear description of the complaint and a validated purchase

Repairs do not constitute an extension to the warranty term.

The manufacturer is not liable for any damages other than those on products

receipt to the manufacturer. Exchanger or return can not be demanded.

No warranty is given if:

supplied.

- The product is not supplied complete with the validated purchase receipt to the manufacturer.
- Defects are caused by misuse or maintenance which differ from that indicated in the instruction manual.
- Repairs are carried out by third parties.
- Defects are caused by neglect.
- Damage or removal of any serial number is found.
- If there is normal wear and tear which may be expected from everyday use.
- The stated warranty terms and conditions have not been satisfied.